

XTENDEX® Series

ST-C6HD-HDBT
ST-C6HDE-HDBT
ST-C64K-300

**HDMI, Ethernet, RS232 and IR Extender
Installation and Operation Manual**



**ST-C64K-300 Local Unit
(Left and Right End Views)**



**ST-C6HDE-HDBT Local Unit
(Left and Right End Views)**

HDMI®
HIGH-DEFINITION MULTIMEDIA INTERFACE

TRADEMARK

XTENDEX and the NTI logo are registered trademarks of Network Technologies Inc in the U.S. and other countries. All other brand names and trademarks or registered trademarks are the property of their respective owners.

COPYRIGHT

Copyright © 2008,2022 by Network Technologies Inc. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written consent of Network Technologies Inc, 1275 Danner Drive, Aurora, Ohio 44202.

CHANGES

The material in this guide is for information only and is subject to change without notice. Network Technologies Inc reserves the right to make changes in the product design without reservation and without notification to its users.

Note: CATx connection cable used between NTI XTENDEX Series Local and Remote or any XTENDEX Series products should not be run underground, outdoors or between buildings.

WARNING: Outdoor or underground runs of CATx cable could be dangerous and will void the warranty.

WARNING: The CATx connection cable used between NTI XTENDEX Series Local and Remote or any XTENDEX Series products must be wired straight through (pin 1 to pin 1, pin 2 to pin 2, etc.) The use of a CROSSOVER CABLE will damage the extender and void your warranty.

TABLE OF CONTENTS

Introduction.....	1
Materials.....	3
Connectors and LEDs.....	4
Connectors and LEDs.....	5
Limitations.....	6
Preparation for Installation.....	6
Installation.....	7
Installing The Remote Unit.....	7
Installing The Local Unit.....	8
Connect the CATx Cables.....	8
Plug-in and Boot Up.....	9
Infrared Control.....	10
100BaseT + RS232 Support.....	11
Technical Specifications.....	12
Interconnection Cable Wiring Method.....	13
Troubleshooting.....	14
Warranty Information.....	15

TABLE OF FIGURES

Figure 1- Connect the extended components to the Remote Unit.....	7
Figure 2- Installation with DVI-only monitor.....	7
Figure 3- Connect the XTENDEX Local Unit to the source.....	8
Figure 4- Connect CATx cable.....	8
Figure 7- Connect the AC adapter to either the Remote Unit or the Local Unit.....	9
Figure 8- Connect IR Emitter and Receiver.....	10
Figure 9- Connections for Ethernet and RS232 Support.....	11
Figure 10- View looking into RJ45 female.....	13

INTRODUCTION

The XTENDEX® HDMI CATx Extender transmits uncompressed digital HDMI signal, IR, optional RS232 and optional Ethernet up to 600 feet over a single CAT6a/7 solid cable. Each video extender consists of a local unit that connects to an HDMI source and a remote unit that connects to an HDMI display.

The XTENDEX Series ST-C6HD-HDBT HDMI Extender transmits uncompressed digital HDMI signal, IR, optional RS232 and optional Ethernet up to 600 feet over a single CAT6a/7 23AWG solid cable. Each video extender consists of a local unit that connects to an HDMI source and a remote unit that connects to an HDMI display.

The XTENDEX Series ST-C64K-300 4K HDMI Extender transmits uncompressed digital HDMI signal, and IR up to 300 feet over a single CATx solid wire cable. Each video extender consists of a local unit that connects to an HDMI source and IR emitter; and a remote unit that connects to an HDMI display and IR receiver.

The XTENDEX Series Extender is extremely simple to install and has been thoroughly tested to insure reliable performance. Through the use of CAT5e/6/6a/7 (CATx) cable it is possible to economically increase the flexibility of an entertainment system. Here are some of the features and ways this can benefit you:

ST-C6HD-HDBT Features:

- Transmits an uncompressed high speed HDMI signal over one CATx cable.
- Supports HDTV resolutions to 1080p and video resolutions to 1920x1200.
 - Extend 1080p up to 5,600 feet when combined with NTI's ST-FOHDMI-LC HDMI Extender via Fiber Optic Cable.
- HDMI features supported:
 - 1920x1200 resolution
 - x.v.Color, sYCC601 color, Adobe RGB Color and Adobe YCC601 color
 - Dolby TrueHD, DTS-HD Master Audio, Dolby Digital, and DTS
 - Bandwidth up to 154 MHz (3.76Gbps)
 - Support for CEC (consumer electronic control) compatible devices.
 - Lip Sync
- HDCP compliant.
- Supports the DDC2B protocol.
- High quality, rugged steel construction with durable powder coat finish.
- Only one power supply is necessary. (Power supply can be connected to either the local or remote unit.)
- Full Infrared Remote (IR) control of HDMI source from remote HDTV using existing source remote control.

Options:

Available with Ethernet port for 100BaseT extension to support a Local or Wide Area Network (LAN/WAN) connection + an RS232 port for serial devices such as Touch Screen monitors (order ST-C6HDE-HDBT).

Note: the ST-C6HDE-HDBT only supports HDTV resolutions to 1080p.

Available with "12VDC 2A" power rating (order ST-C6HD-HDBT-12VNPS)- 2.1 x 5.5mm power jack, AC adapter sold separately

ST-C64K-300 Features:

- Transmits an uncompressed high speed HDMI signal over one CATx cable.
- Supports Ultra HD 4Kx2K resolutions to 3840x2160(30Hz) 2K resolutions to 2048x1080, HDTV resolutions to 1080p and computer resolutions to 1920x1200.
- Supports embedded digital audio through HDMI compatible TV's or audio receivers.
- HDMI features supported:
 - HDMI 1.4
 - x.v.Color, sYCC601 color, Adobe RGB Color and Adobe YCC601 color
 - Dolby TrueHD, DTS-HD Master Audio, Dolby Digital, and DTS
 - Bandwidth up to 340MHz (10.2Gbps)
 - Support for CEC (consumer electronic control) compatible devices.
 - Lip Sync
- HDCP compliant.
- Supports the DDC2B protocol.
- High quality, rugged steel construction with durable powder coat finish.
- Only one power supply is necessary. (Power supply can be connected to either the local or remote unit.)
- Full Infrared Remote (IR) control of HDMI source from remote HDTV using existing source remote control.

MATERIALS

Materials Included with ST-C6HD-HDBT/ST-C64K-300 kit:

- ✓ NTI XTENDEX Local Unit
- ✓ NTI XTENDEX Remote Unit
- ✓ 1-HD-3-MM 3 foot male-to-male HDMI video cable
- ✓ 1-100VAC to 240VAC at 50 or 60Hz-24VDC/1.0A AC Adapter (NTI#PS4202) (NOT included with ST-C6HD-HDBT-12VNPS)
- ✓ 1- Power Cord- country specific (NOT included with ST-C6HD-HDBT-12VNPS)
- ✓ 3 Foot IR-EMITTER (IR-EMTR-3)
- ✓ 3 Foot IR-RECEIVER (IR-RCVR-3)
- ✓ 2.1x.5.5mm DC Plug with 36" Lead (**ST-C6HD-HDBT-12VNPS only**)

Additional Materials Included with ST-C6HDE-HDBT kit:


- ✓ CT6182 DB9 Female-to-RJ45 Female adapter
- ✓ CT6488 DB9 Male-to-RJ45 Female adapter
- ✓ 2-CB4352 5 foot RJ45-to-RJ45 CAT5 patch cable


Additional materials may be required but are not supplied:

- CAT5e solid UTP ; 6/6a solid UTP; CAT6a solid UTP 23AWG; /CAT7 solid STP 23AWG (CATx) twisted-pair cables terminated with RJ45 connectors wired straight thru- pin 1 to pin 1, etc. (see page 13 for proper EIA/TIA 568 B wiring method)
- HDMI male-male cable to connect a HDMI source or display (Order NTI # HD-xx-MM where xx=3, 6, 9,14,20,30, 50 and 100 foot cable).
- DVI-D male to HDMI-A male single link cable to connect a DVI source or display (Order NTI # DVI-HD-xx-MM where xx=3, 6, 10, or 15 foot cable)

Always use the shortest possible cable for best performance.

Contact your nearest NTI distributor or NTI directly for all of your KVM needs at 800-RGB-TECH (800-742-8324) in US & Canada or 330-562-7070 (Worldwide) or at our website at <http://www.networktechinc.com> and we will be happy to be of assistance.

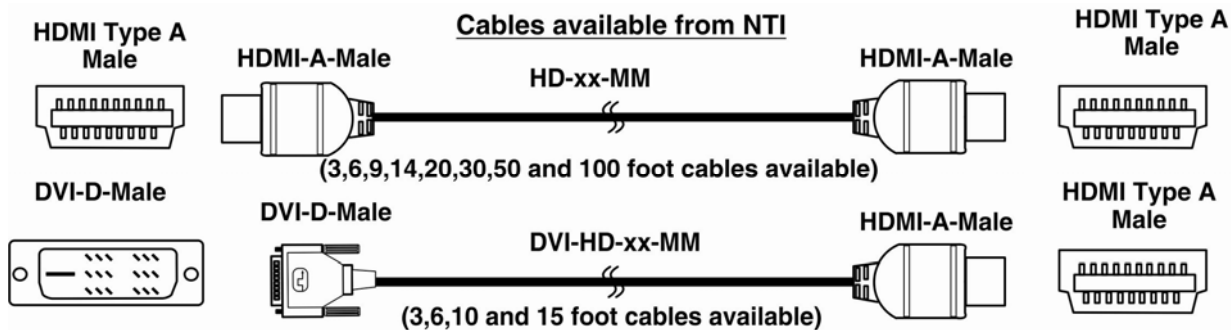


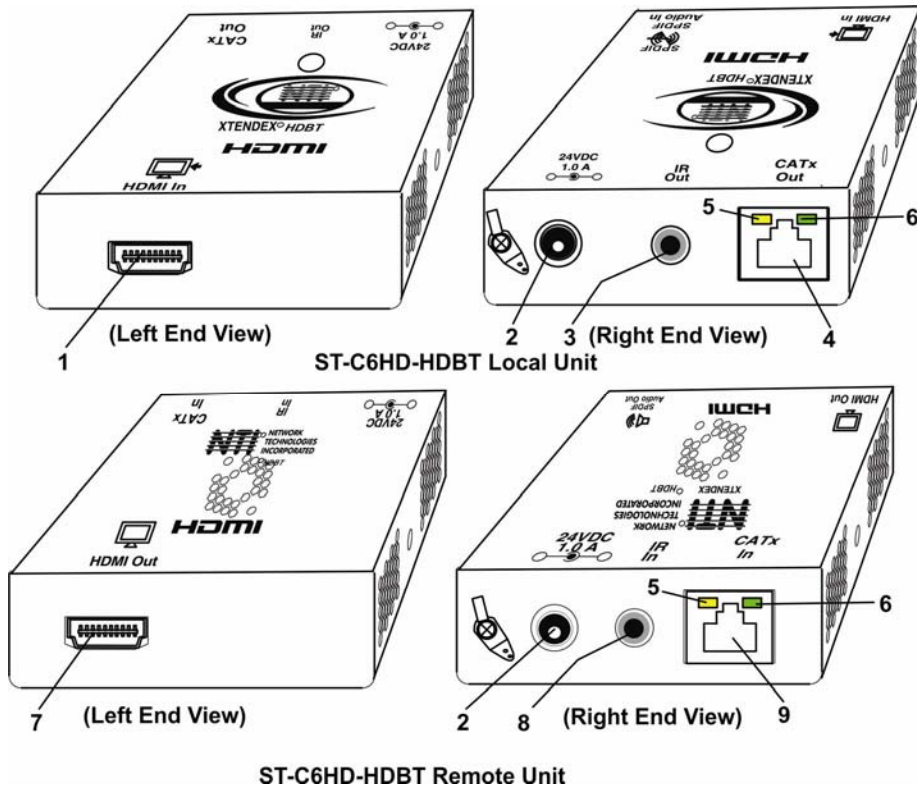

CONNECTORS AND LEDS

#	LABEL	CONNECTOR	DESCRIPTION
1	HDMI In	HDMI female video connector	for connecting an HDMI cable between the Local Unit and the video source
2	24VDC- 1.0A	1.0mm Power Jack	connection jack for the AC adapter (only the Local or the Remote Unit needs to be powered, <u>not both</u>) (Not applicable to ST-C6HD-HDBT-12VNPS)
3	12VDC- 2.0A	2.1X5.5mm Power Jack	connection jack for the 12V AC adapter (only the Local Unit) (ST-C6HD-HDBT-12VNPS model only)
	IR Out	3.5mm Stereo Jack	for connecting the IR Emitter
4	CATx Out	RJ45 connector	for connecting the CAT5e/6/6a/7 cable between the Local and Remote units
5	Yellow LED	--	traffic indicator - illuminates when there is communication between the local and remote units.
6	Green LED	--	power indicator - illuminates when power has been supplied to the unit
7	HDMI Out	HDMI female video connector	for connecting the remote display device
8	IR In	3.5mm Stereo Jack	for connecting the IR Receiver
9	CATx In	RJ45 connector	for connecting the CAT5e/6/6a/7 cable between the Local and Remote units

Note: ST-C64K-300 has same connections as ST-C6HD-HDBT (above).

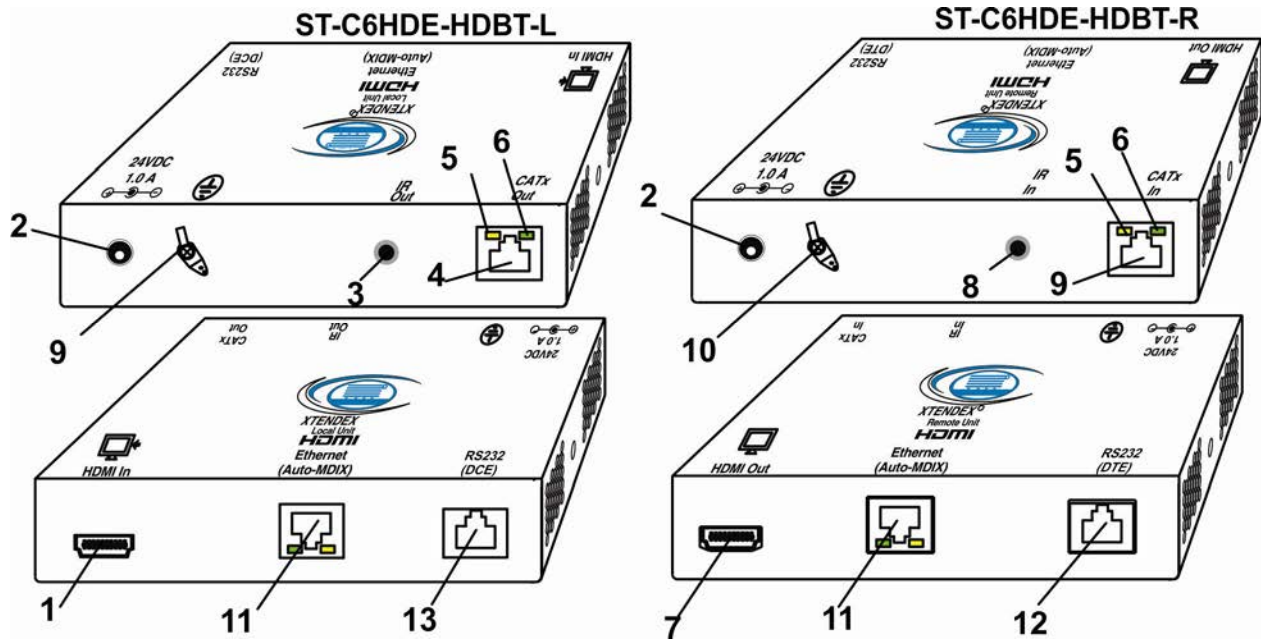

CONNECTORS AND LEDS

#	LABEL	CONNECTOR	DESCRIPTION
1	HDMI In	HDMI female video connector	for connecting an HDMI cable between the Local Unit and the video source
2	24VDC- 1.0A	1.0mm Power Jack	connection jack for the AC adapter (only the Local or the Remote Unit needs to be powered, <u>not both</u>)
3	IR Out	3.5mm Stereo Jack	for connecting the IR Emitter
4	CATx Out	RJ45 connector	for connecting the CAT5e/6/6a/7 cable between the Local and Remote units
5	Yellow LED	--	traffic indicator - illuminates when there is communication between the local and remote units.
6	Green LED	--	power indicator - illuminates when power has been supplied to the unit
7	HDMI Out	HDMI female video connector	for connecting the remote display device
8	IR In	3.5mm Stereo Jack	for connecting the IR Receiver
9	CATx In	RJ45 connector	for connecting the CAT5e/6/6a/7 cable between the Local and Remote units
10	Ground	Ground terminal	for connecting external ground wire
11	Ethernet	RJ45 connector	for connecting cable to either the LAN or an extended Ethernet connected device (model with Ethernet support only)
12	RS232 (DTE)	RJ45 connector	for connecting serial cable to touchscreen monitor
13	RS232 (DCE)	RJ45 connector	for connecting serial cable from CPU

WARNING: If the CATx IN or CATx OUT ports of a powered Remote or Local extender are connected to the RS232 port of another Remote or Local unit, the CATx port will be damaged and render the XTENDEX unusable and void the warranty.


LIMITATIONS

- The use of CAT5e or of any stranded cabling will reduce the maximum distance and resolution.

WARNING: If the CATx IN or CATx OUT ports of a powered Remote or Local extender are connected to the RS232 port of another Remote or Local unit, the CATx port will be damaged and render the XTENDEX unusable and void the warranty.


PREPARATION FOR INSTALLATION

- Locations should be chosen for the monitor that also has space to connect the Remote unit within the distance provided by the cables. If extension cables are needed, contact NTI for the cables required.
- The CATx cables must be run to the locations where the Remote and Local units will be connected. Be careful to route the cables away from any sources of magnetic fields or electrical interference that might reduce the quality of the video signal (i.e. AC motors, welding equipment, fluorescent lighting, etc.).
- All cables should be installed in such a way that they do not cause stress on their connections to the equipment. Extended lengths of cable hanging from a connection may interfere with the quality of that connection. Secure cables as needed to minimize this.
- Properly shut down and disconnect the power from the video source and monitor to be separated. If other equipment is involved whose connections are being interrupted, be sure to refer to the instruction manuals for that equipment for proper disconnection and reconnection procedures before proceeding.
- Be very careful not to obstruct the air vents on the Remote Unit in its installed location.

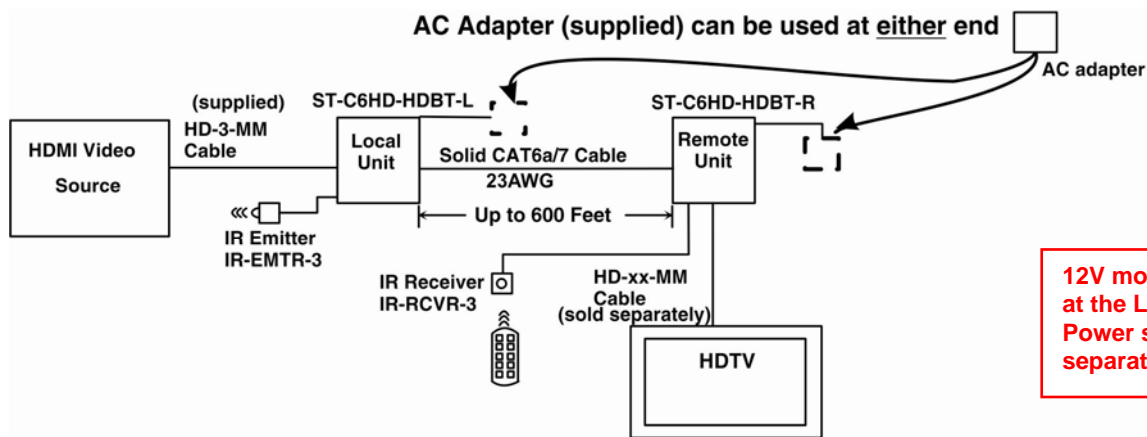

12V model is powered at the Local Unit only. Power supply sold separately.

TYPICAL APPLICATION

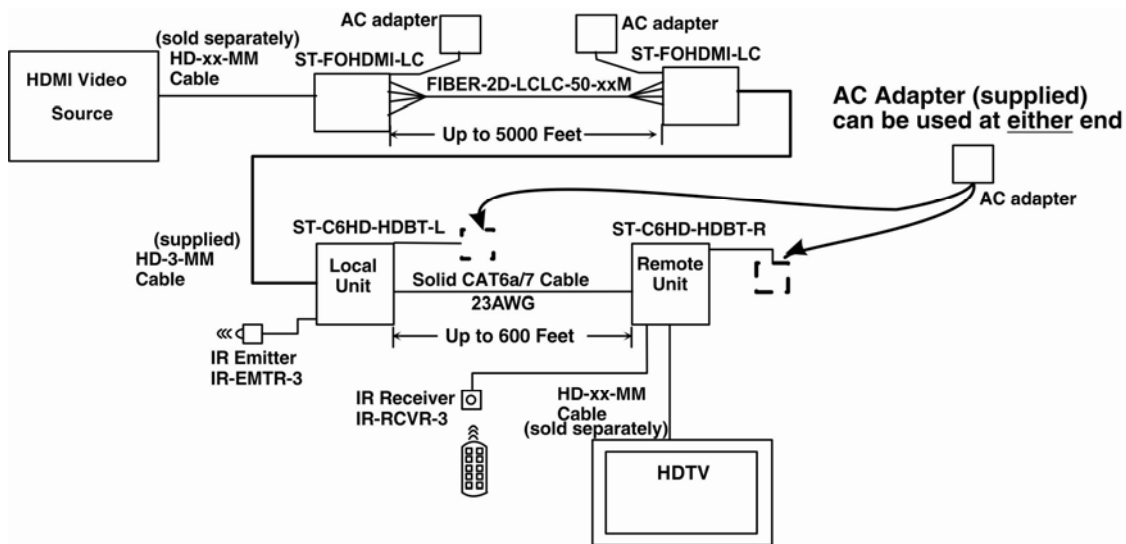

APPLICATION WITH FIBEROPTIC EXTENDER ADDED

INSTALLATION

Installing The Remote Unit

1. Position the Remote Unit such that the CATx cable, the monitor cable(s), and audio cables (if applicable) can each reach the Remote Unit without putting strain on the cables.
2. Connect a HD-xx-MM (or DVI-HD-xx-MM cable depending upon what connector your display will accept) to the female HDMI video connector labeled "HDMI Out" on the Remote Unit.

Note: Be very careful that the installed location does not obstruct the air vents in Remote Unit case.

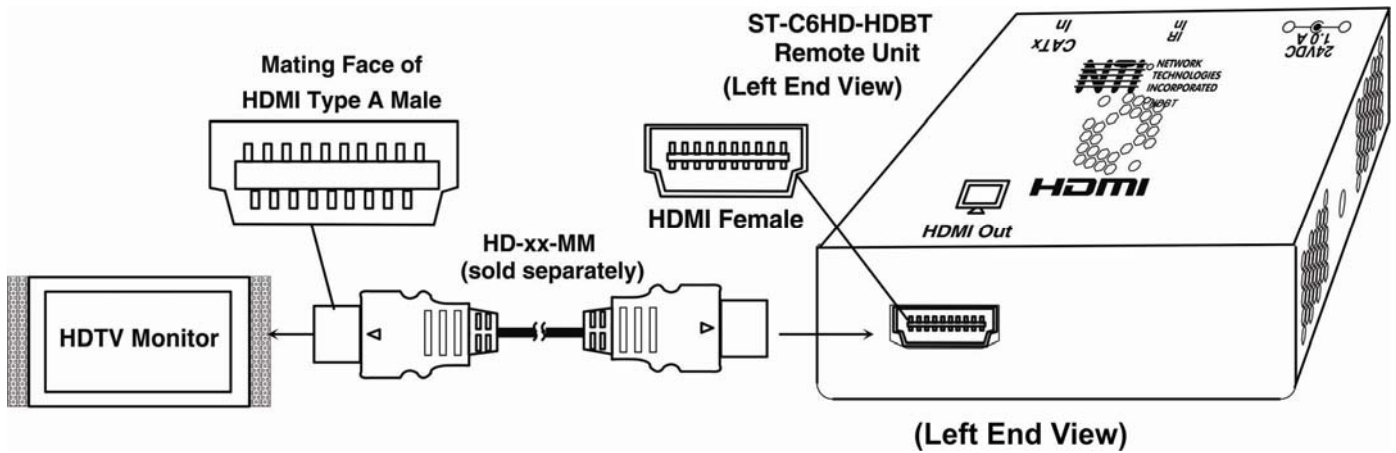


Figure 1- Connect the extended components to the Remote Unit

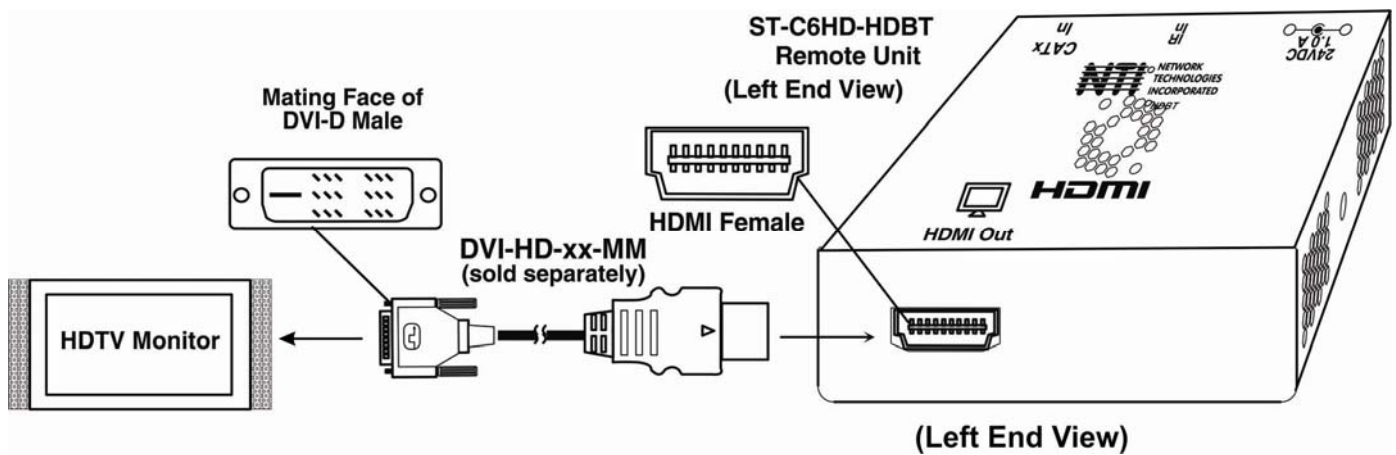


Figure 2- Installation with DVI-only monitor

Installing The Local Unit

Connect an HD-3-MM (supplied) or DVI-HD-xx-MM cable (page 3) between the video source and the "HDMI In" connector on the Local Unit.

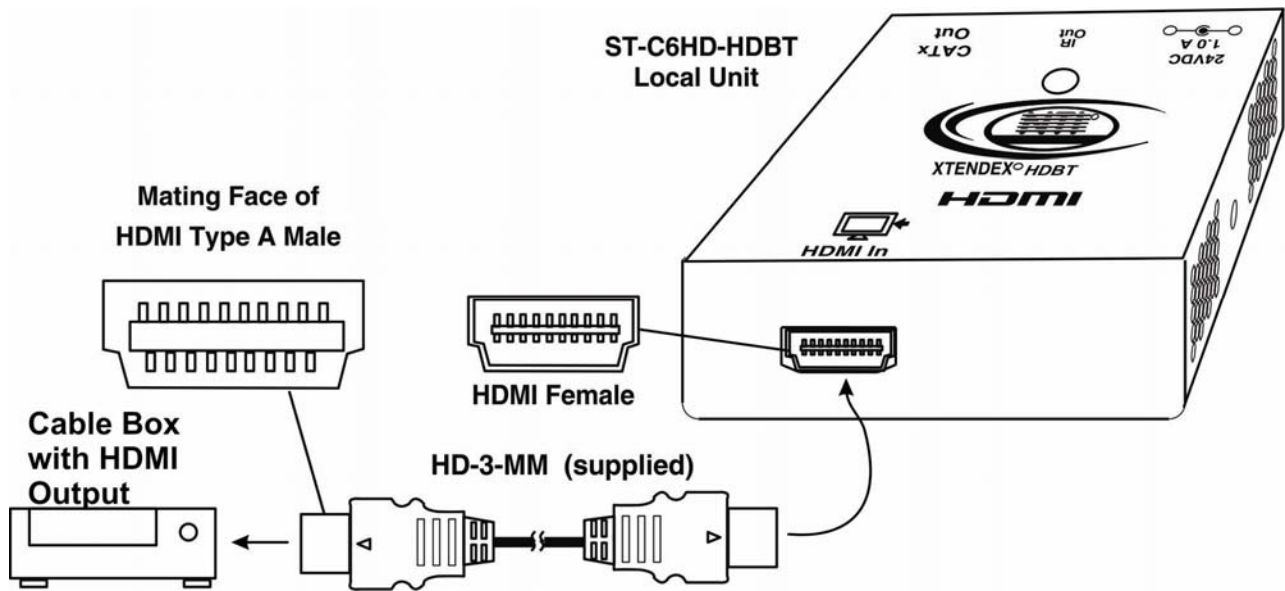


Figure 3- Connect the XTENDEX Local Unit to the source

Connect the CATx Cables

Connect the CATx cable between the "CATx" ports on the Local and Remote Unit. (See Figure 4) When properly inserted the cable ends should snap into place.

Note: The ST-C64K-300 can be connected with a maximum 300 foot cable (CAT6a/7 STP).



WARNING: Never connect the XTENDEX to an Ethernet card, Ethernet router, hub or switch or other Ethernet RJ45 connector of an Ethernet device. Damage to devices connected to the Ethernet may result.

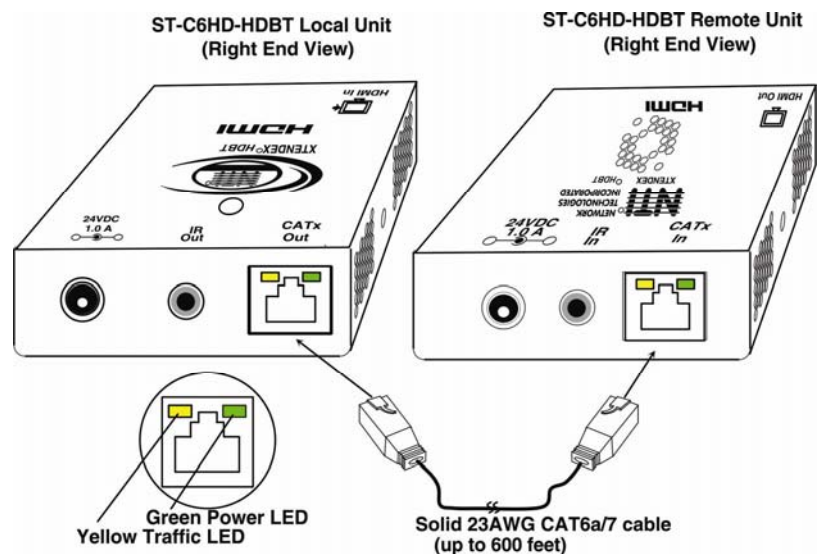


Figure 4- Connect CATx cable

WARNING: The CATx connection cable used between NTI XTENDEX Series Local and Remote or any XTENDEX Series products must be wired straight through (pin 1 to pin 1, pin 2 to pin 2, etc.) The use of a CROSSOVER CABLE will damage the extender and void your warranty.

Plug-in and Boot Up

1. Plug the power cord from the monitor into the power outlet.
2. Connect an AC adapter power connector to the 24VDC port on **either** the Remote Unit or the Local Unit. Plug the AC adapter into a power outlet. The green LED on the RJ45 connector of both the Remote and Local Units should illuminate, indicating that a proper power connection has been made to them. (See Figure 5)
3. Turn ON the video source and monitor. The yellow LED on both the Local and Remote Units should illuminate. The video source and monitor should each react as if directly connected to each other.

NOTE: The ST-C6HD-HDBT-12VNPS is powered by a 12VDC 2A power supply (sold separately) and at the Local Unit only. The Remote Unit is powered by the Local Unit through the CATx cable.

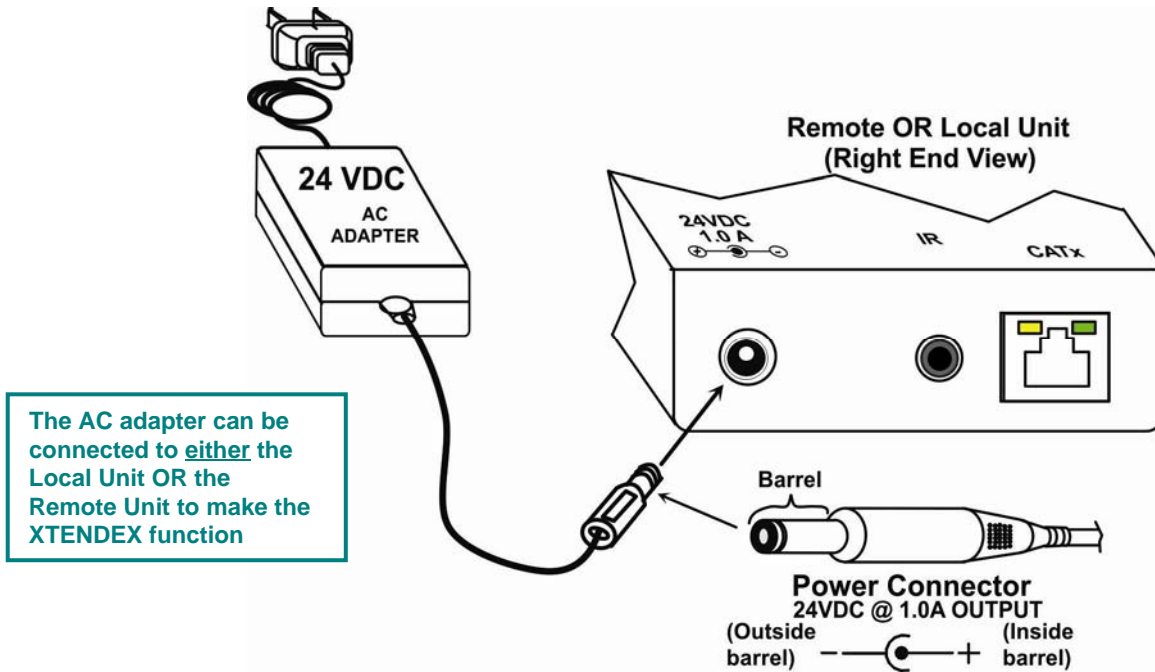


Figure 5- Connect the AC adapter to either the Remote Unit or the Local Unit

INFRARED CONTROL

The XTENDEX includes ports for connecting an infrared emitter and receiver (included) to work in conjunction with the IR remote control used to operate the signal source. Connect the receiver to the "IR IN" port on the Remote Unit and the emitter to the "IR OUT" port on the Local unit. Position the end of the receiver such that the signal from the remote control can easily reach the IR sensor. Position the end of the emitter such that the extended signal can be sent to the signal source.

Note: The IR Emitter and Receiver work within a frequency range of 30-50kHz. Check the specifications for the device you are extending to make sure the XTENDEX will work with it.

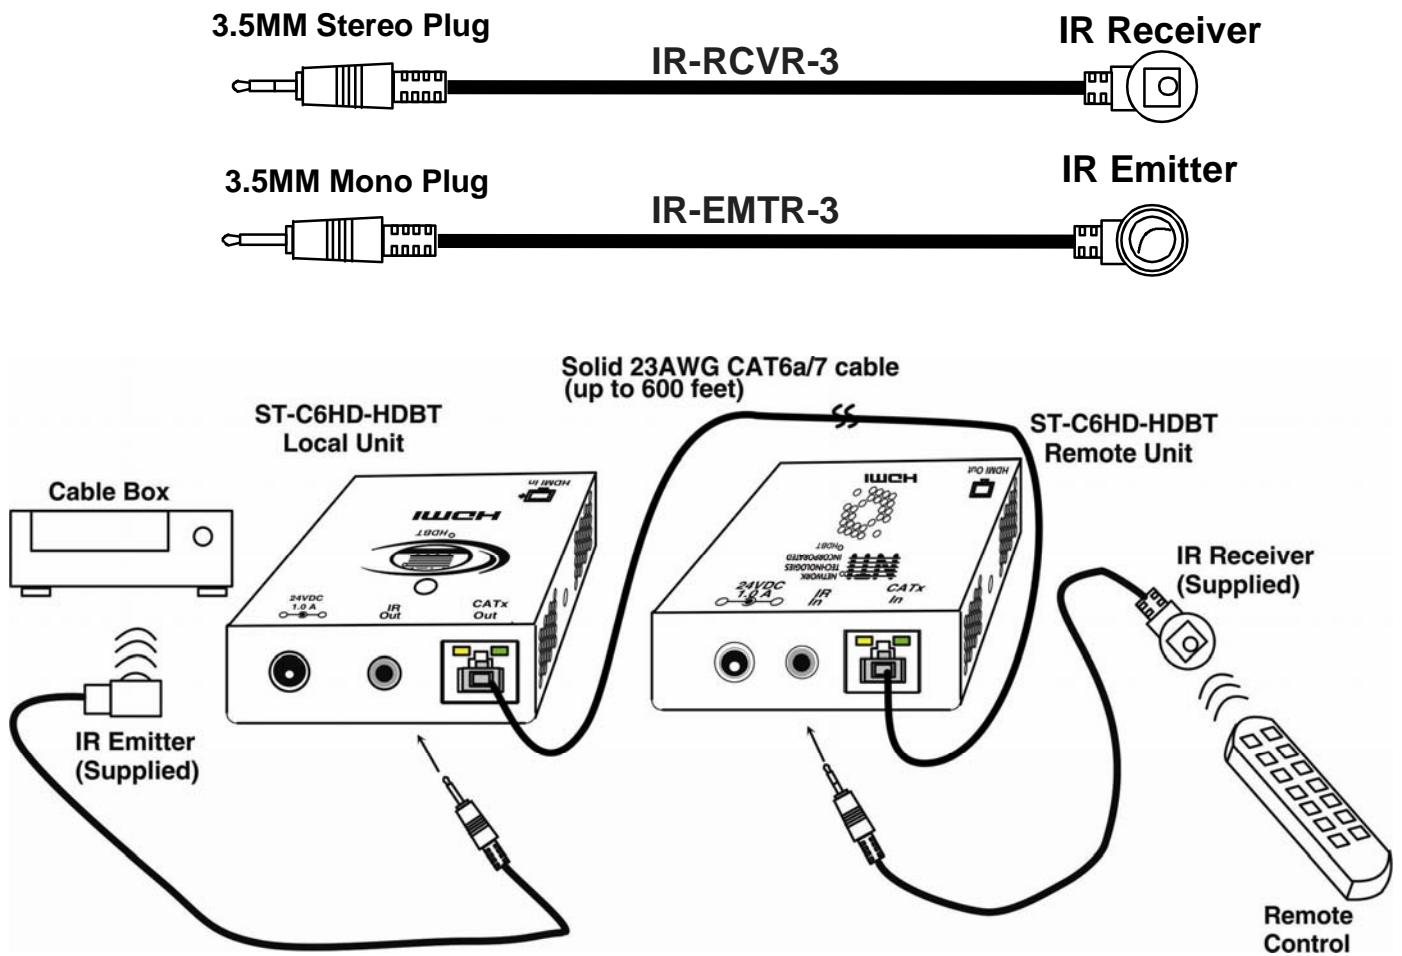


Figure 6- Connect IR Emitter and Receiver

100BASET + RS232 SUPPORT

If you have purchased the STC6HDE-HDBT, then your unit includes additional support for 100BaseT and RS232 extension.

With the 100BaseT support option, the “Ethernet Port” can be used to extend a Local or Wide Area Network (LAN/WAN) connection. The Local or Remote unit can be used to connect a modem, Blu-Ray player, router or switch or a network device (PC, printer, hub etc) If the network device is connected at the Local Unit, then the LAN/WAN connection must be at the Remote Unit, and visa versa.

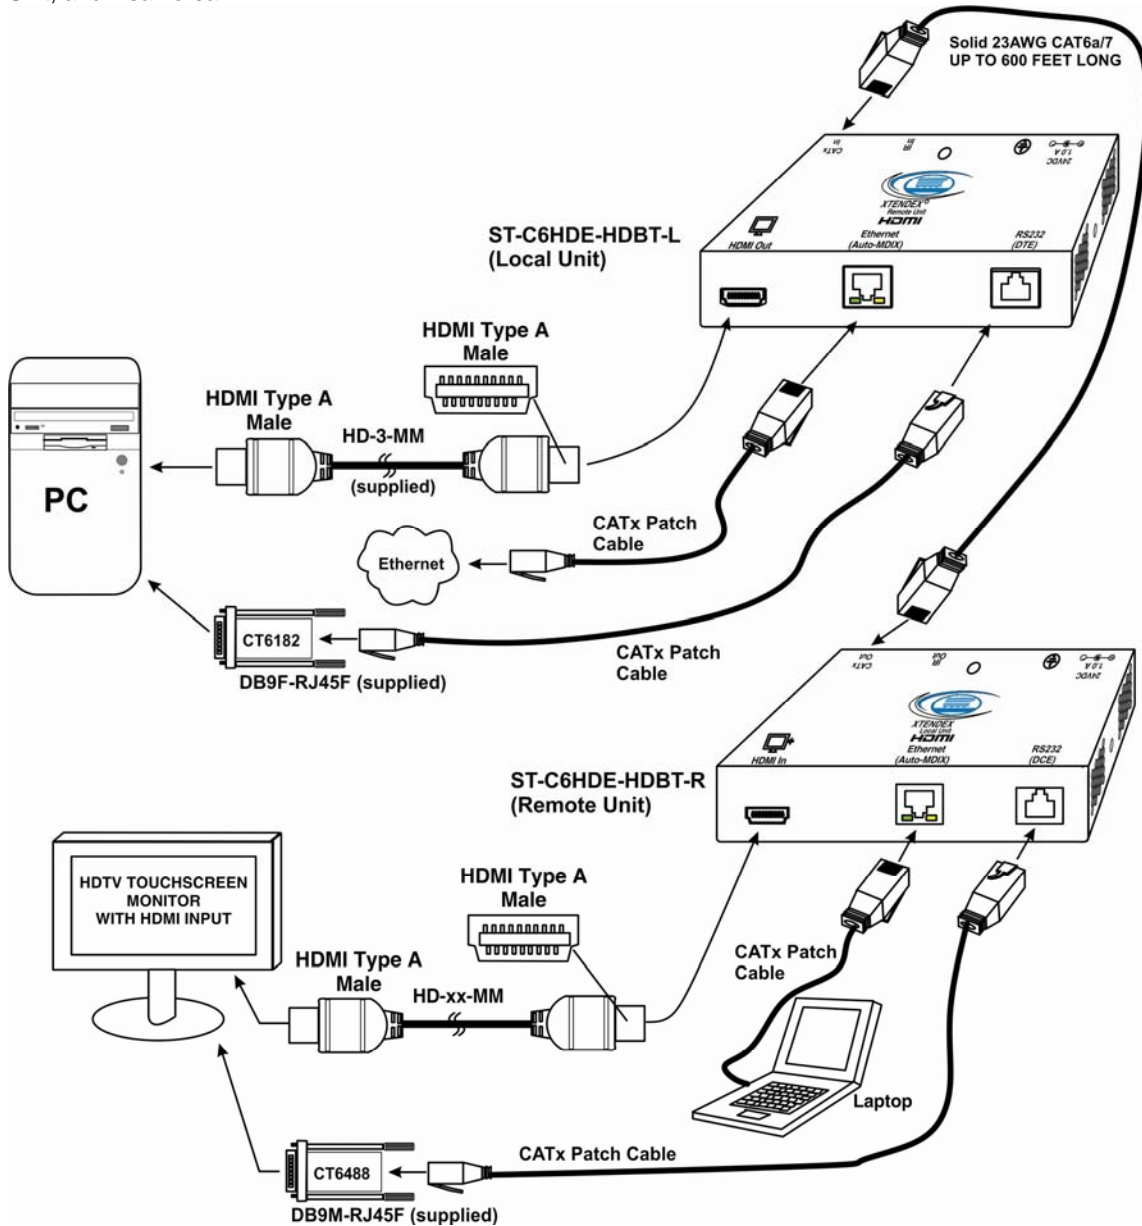


Figure 7- Connections for Ethernet and RS232 Support

Additionally, RS232 extension provides support for serial device communication, like touchscreen monitors as shown in the figure above.

- Connect the DB9F to RJ45 adapter (supplied) to the CPU and a CATx patch cable between the adapter and the “RS232” port on the Local Unit.
- Connect the DB9M to RJ45 adapter (supplied) to the monitor and a CATx patch cable between the adapter and the “RS232” port on the Remote Unit.

WARNING: If the CATx IN or CATx OUT ports of a powered Remote or Local extender are connected to the RS232 port of another Remote or Local unit, the CATx port will be damaged and render the XTENDEX unusable and void the warranty.

TECHNICAL SPECIFICATIONS

Video	
Video Connectors	HDMI Type A Female
Input Video Signal	TMDS
Bandwidth	340MHz (10.2Gbps) (ST-C64K-300 model only) 154 MHz (3.76Gbps) (All other models)
HDMI Version	HDMI1.4 (ST-C64K-300 model only) HDMI 1.2 (All other models)
DVI Support	DVI 1.0
DDC Support	DDC2b
HDCP Version	HDCP 1.2
Audio	
Embedded Audio Format	Dolby TrueHD, DTS-HD Master Audio, Dolby Digital, and DTS
IR	
Input/Output	3.5mm Stereo Jack
Signal Type	TTL, 0-5VDC
Input Impedance	1.5 kohm
Output Impedance	33 ohm
Maximum Input/Output Level	5.0 Vp-p
Center Carrier Frequency	36kHz
Frequency Range	30-50kHz
Maximum Distance (from receiver)	10 feet, straight; 5 feet at 45 degree angle
Ethernet (where supported)	
Input/Output	RJ45 Female
Speed	100BaseT
RS232 (where supported)	
Input/Output	RJ45 Female
General	
Interconnect Cable	CAT5e solid UTP/STP; CAT6/6a Solid UTP/STP; CAT7 Solid STP EIA/TIA 568 B wiring with male RJ45 connectors (see table page 14)
Operating Temperature	32 to 122° F (0-50° C)
Storage Temperature	-22 to 140° F (-30 to 60° C)
Operating Humidity Range	5 to 90% non-condensing RH
Power	ST-C6HD(E)-HDBT- 100V to 240VAC at 50 or 60Hz-24VDC/1.0A via AC Adapter (Included) (for Remote or Local, not both) ST-C6HD-HDBT-12VNPS- 12VDC/ 2.0A via AC Adapter (sold separately) (Local Unit only) ST-C64K-300- 100V to 240VAC at 50 or 60Hz-24VDC/1.0A via AC Adapter (Included) (for Remote or Local, not both)
Enclosure type	Electro-galvanized steel black powder coated
Size (In.) WxDxH	2.54x3.08x1.08 (ST-C64K-300) 6.06x3.05x1.08 (ST-C6HD(E)-HDBT only)
Compliance Certifications	CE, RoHS, TAA compliant

Cable Ranges Tested

Model	Cable Type	Cable Length (In Feet)	Max. Resolution
ST-C6HD-HDBT	CAT5e/6	450	1900x1200, 1080p@60Hz
	CAT6a/7 23AWG	600	
ST-C6HDE-HDBT	CAT5e/6	450	1080p@60Hz
	CAT6a/7 23AWG	600	
ST-C64K-300	CAT5e/6 Solid UTP	150	3840x2160 @30Hz
	CAT5e/6 Solid STP	250	
	CAT6a/7 Solid STP	300	

INTERCONNECTION CABLE WIRING METHOD

The CATx connection cables between the Remote and Local are terminated with RJ45 connectors and must be wired according to the EIA/TIA 568 B industry standard. Wiring is per the table and drawing below.

Pin	Wire Color	Pair	Function
1	White/Orange	2	T
2	Orange	2	R
3	White/Green	3	T
4	Blue	1	R
5	White/Blue	1	T
6	Green	3	R
7	White/Brown	4	T
8	Brown	4	R

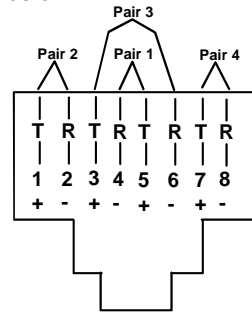


Figure 8- View looking into RJ45 female

TROUBLESHOOTING

Each and every piece of every product produced by Network Technologies Inc is 100% tested to exacting specifications. We make every effort to insure trouble-free installation and operation of our products. If problems are experienced while installing this product, please look over the troubleshooting chart below to see if perhaps we can answer any questions that arise. If the answer is not found in the chart, a solution may be found in the knowledgebase on our website at <http://information.networktechinc.com/jive/kbindex.jspa> or please call us directly at **(800) 742-8324 (800-RGB-TECH)** or **(330) 562-7070** and we will be happy to assist in any way we can.

Problem	Cause	Solution
Power LED does not illuminate	<ul style="list-style-type: none"> Power supply is not connected or plugged-in. 	<ul style="list-style-type: none"> Make sure outlet is live and AC adapter is plugged-in. Make sure 24VDC jack is fully connected
Power LED illuminates on one end, and not the other	<ul style="list-style-type: none"> CATx cable not properly connected 	<ul style="list-style-type: none"> Check the CATx cable connection at both ends.
No Video on monitor	<ul style="list-style-type: none"> One or more video cables is loose or disconnected. No power to Remote Unit. CATx cable is not connected. CATx cable is too long HDMI/DVI cable is too long 	<ul style="list-style-type: none"> Check all video cable connections Make sure "Power" LED is illuminated on local and remote. If not, see solutions for first problem above. With all the cables properly connected, power cycle the video/audio source. Make sure "Traffic" LED on local and remote is illuminated. Make sure they are snapped-in properly and completely and reboot. Switch to shorter cable or lower resolution
Video Picture is noisy	<ul style="list-style-type: none"> All Video Cables are not firmly seated. CATx /HDMI/DVI cable is too long The CATx cable is not properly connected. CATx cable is poor quality for the length of cable used CATx cable is installed near noisy equipment 	<ul style="list-style-type: none"> Check all connections. Make sure all cables are fully seated. Switch to shorter cable or lower resolution Check cable connections. Make sure they are snapped-in properly and completely. Install a higher quality CATx cable. Relocate run of CATx cable away from other electrical equipment
Monitor flashes or goes blank for a second or two	<ul style="list-style-type: none"> Electrical power system is very noisy, particularly the ground. The CATx cable is not properly connected. CATx cable is too long HDMI/DVI cable is too long 	<ul style="list-style-type: none"> Make sure the interconnection cable is not near any power lines. Check cable connections. Make sure ends are snapped-in properly and completely. Switch to shorter cable or lower resolution (maximum length is 600 feet). Switch to shorter cable

WARNING: If the CATx IN or CATx OUT ports of a powered Remote or Local extender are connected to the RS232 port of another Remote or Local unit, the CATx port will be damaged and render the XTENDEX unusable and void the warranty.

WARRANTY INFORMATION

The warranty period on this product (parts and labor) is two (2) years from the date of purchase. Please contact Network Technologies Inc at **(800) 742-8324** (800-RGB-TECH) or **(330) 562-7070** or visit our website at <http://www.networktechinc.com/return-policy.html> for information regarding repairs and/or returns. A return authorization number is required for all repairs/returns.

WARNING: The CATx connection cable used between NTI XTENDEX Series Local and Remote or any XTENDEX Series products must be wired straight through (pin 1 to pin 1, pin 2 to pin 2, etc.) The use of a CROSSOVER CABLE will damage the extender and void your warranty.

Manual 150 Rev. 12/9/22